

جدول سازگاری باتری‌ها، شارژرها و آداپتورهای AC با دوربین‌های دیجیتال SLR و دوربین‌های دیجیتال کول‌پیکس نیکون

Camera	Battery	AC Adapter	Charger
Coolpix 700	4 - "AA" Batteries باتری قلمی آلکالاین	EH-30 AC Adapter	شارژر و باتری قلمی
Coolpix 775	EN-EL1 Li-Ion Battery	EH-53 AC Adapter	MH-53 Battery Charger
Coolpix 800	4 - "AA" Batteries باتری قلمی آلکالاین	EH-30 AC Adapter	شارژر و باتری قلمی
Coolpix 880	EN-EL1 Li-Ion Battery	EH-52 AC Adapter	MH-53 Battery Charger
Coolpix 885	EN-EL1 Li-Ion Battery	EH-53 AC Adapter	MH-53 Battery Charger
Coolpix 900	4 - "AA" Batteries باتری قلمی آلکالاین	EH-30 AC Adapter	شارژر و باتری قلمی
Coolpix 950	4 - "AA" Batteries باتری قلمی آلکالاین	EH-30 AC Adapter	شارژر و باتری قلمی
Coolpix 990	4 - "AA" Batteries باتری قلمی آلکالاین	EH-31 AC Adapter	شارژر و باتری قلمی
Coolpix 995	EN-EL1 Li-Ion Battery	EH-53 AC Adapter	MH-53 Battery Charger
Coolpix 2000	4 - "AA" Batteries باتری قلمی آلکالاین	EH-53 AC Adapter	شارژر و باتری قلمی
Coolpix 2100	1-CRV3 or 2 EN-MH1	EH-61 AC Adapter	MH-70 (for EN-MH1 NiMH)
Coolpix 2200	1-CRV3 or 2 EN-MH1	EH-62B AC Adapter	MH-70 (for EN-MH1 NiMH)
Coolpix 2500	EN-EL2 Li-Ion Battery	EH-60 AC Adapter	MH-60 Battery Charger
Coolpix 3100	1-CRV3 or 2 EN-MH1	EH-61 AC Adapter	MH-70 (for EN-MH1 NiMH)
Coolpix 3200	1-CRV3 or 2 EN-MH1	EH-62B AC Adapter	MH-70 (for EN-MH1 NiMH)
Coolpix 3500	EN-EL2 Li-Ion Battery	EH-60 AC Adapter	MH-60 Battery Charger
Coolpix 3700	EN-EL5 Li-Ion or CP1 Lithium Battery	EH-62A AC Adapter	MH-61 Battery Charger
Coolpix 4200	EN-EL5 Li-Ion Battery	EH-62 AC Adapter	MH-61 Battery Charger
Coolpix 4300	EN-EL1 Li-Ion Battery	EH-53 AC Adapter	MH-53 Battery Charger
Coolpix 4500	EN-EL1 Li-Ion Battery	EH-53 AC Adapter	MH-53 Battery Charger
Coolpix 4800	EN-EL1 Li-Ion Battery	EH-54 AC Adapter	MH-53 Battery Charger
Coolpix 5000	EN-EL1 Li-Ion Battery	EH-53 AC Adapter	MH-53 Battery Charger
Coolpix 5200	EN-EL5 Li-Ion Battery	EH-62 AC Adapter	MH-61 Battery Charger
Coolpix 5700	EN-EL1 Li-Ion Battery	EH-53 AC Adapter	MH-53 Battery Charger
Coolpix 5400	EN-EL1 Li-Ion Battery	EH-53 AC Adapter	MH-53 Battery Charger
Coolpix 8400	EN-EL7 Li-Ion Battery	EH-54 AC Adapter	MH-56 Battery Charger
Coolpix 8700	EN-EL1 Li-Ion Battery	EH-53 AC Adapter	MH-53 Battery Charger
Coolpix 8800	EN-EL7 Li-Ion Battery	EH-54 AC Adapter	MH-56 Battery Charger
Coolpix SQ	EN-EL2 Li-Ion Battery	EH-61 AC Adapter	MV-10 Cool Station
Coolpix S1	EN-EL8 Li-Ion Battery	EH-63 AC Adapter	MV-11 Cool Station
Coolpix S2	EN-EL8 Li-Ion Battery	EH-63 AC Adapter	MV-12 Cool Station
Coolpix S3	EN-EL8 Li-Ion Battery	EH-63 AC Adapter	MV-11/11B Cool Station
Coolpix S4	2 "AA" Batteries or EN-MH1-B2 NiMH Batteries	EH-62B AC Adapter	MH-71 Battery Charger

Coolpix S5	EN-EL8 Li-Ion Battery	EH-64 AC Adapter	MV-14 Cool Station
Coolpix S6	EN-EL8 Li-Ion Battery	EH-64 AC Adapter	MV-15 Cool Station
Coolpix S7	EN-EL8 Li-Ion Battery	EH-64 AC Adapter	MV-15 Cool Station
Coolpix S7c	EN-EL8 Li-Ion Battery	EH-64 AC Adapter	MV-15 Cool Station
Coolpix S8	EN-EL8 Li-Ion Battery	EH-64 AC Adapter	MV-14 Cool Station
Coolpix S9	EN-EL8 Li-Ion Battery	EH-62C AC Adapter	MH-62 Battery Charger
Coolpix S10	EN-EL5 Li-Ion Battery	EH-62A AC Adapter	MH-61 Battery Charger
Coolpix S50	EN-EL8 Li-Ion Battery	EH-64 AC Adapter	MH-62 Battery Charger
Coolpix S50c	EN-EL8 Li-Ion Battery	EH-64 AC Adapter	MH-62 Battery Charger
Coolpix S51	EN-EL8 Li-Ion Battery	EH-64 AC Adapter	MH-62 Battery Charger
Coolpix S51c	EN-EL8 Li-Ion Battery	EH-64 AC Adapter	MH-62 Battery Charger
Coolpix S200	EN-EL10 Li-Ion Battery	EH-62D AC Adapter	MH-63 Battery Charger
Coolpix S210	EN-EL10 Li-Ion Battery	EH-62D AC Adapter	MH-63 Battery Charger
Coolpix S500	EN-EL10 Li-Ion Battery	EH-62D AC Adapter	MH-63 Battery Charger
Coolpix S510	EN-EL10 Li-Ion Battery	EH-62D AC Adapter	MH-63 Battery Charger
Coolpix S520	EN-EL10 Li-Ion Battery	EH-62D AC Adapter	MH-63 Battery Charger
Coolpix S550	EN-EL10 Li-Ion Battery	EH-62D AC Adapter	MH-63 Battery Charger
Coolpix S600	EN-EL10 Li-Ion Battery	EH-62D AC Adapter	MH-63 Battery Charger
Coolpix L1	2 "AA" Batteries or EN-MH1-B2 NiMH Batteries	EH-62B AC Adapter	MH-71 Battery Charger
Coolpix L2	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix L3	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix L4	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix L5	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix L6	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix L10	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix L11	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix L12	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix L15	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix L16	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix L18	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix P1	EN-EL8 Li-Ion Battery	EH-62C AC	MH-62 Battery Charger

		Adapter	
Coolpix P2	EN-EL8 Li-Ion Battery	EH-62C AC Adapter	MH-62 Battery Charger
Coolpix P3	EN-EL5 Li-Ion Battery	EH-62A AC Adapter	MH-61 Battery Charger
Coolpix P4	EN-EL5 Li-Ion Battery	EH-62A AC Adapter	MH-61 Battery Charger
Coolpix P50	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix P60	2 "AA" Batteries or EN-MH1 NiMH Batteries	EH-65A AC Adapter	MH-71 Battery Charger
Coolpix P5000	EN-EL5 Li-Ion Battery	EH-62A AC Adapter	MH-61 Battery Charger
Coolpix P5100	EN-EL5 Li-Ion Battery	EH-62A AC Adapter	MH-61 Battery Charger
D1	EN-4 Ni-MH Battery	EH-4 AC Adapter	MH-16 AC or MH-17 DC
D100	EN-EL3 Li-Ion Battery	EH-5 AC Adapter	MH-18/MH-19 Quick Charger
D1X	EN-4 Ni-MH Battery	EH-4 AC Adapter	MH-16 AC or MH-17 DC
D1H	EN-4 Ni-MH Battery	EH-4 AC Adapter	MH-16 AC or MH-17 DC
D40	EN-EL9 Li-Ion Battery	EP-5 AC Adapter	MH-23 Quick Charger
D40X	EN-EL9 Li-Ion Battery	EP-5 AC Adapter	MH-23 Quick Charger
D50	EN-EL3 Li-Ion Battery	EH-5 AC Adapter	MH-18a Quick Charger
D70	EN-EL3 Li-Ion Battery	EH-5 AC Adapter	MH-18/MH-19 Quick Charger
D70s	EN-EL3/3a Li-Ion Battery	EH-5 AC Adapter	MH-18a Quick Charger
D80	EN-EL3e Li-Ion Battery	EH-5 AC Adapter	MH-18a Quick Charger
D200	EN-EL3a Li-Ion Battery	EH-6 AC Adapter	MH-18a Quick Charger
D2X	EN-EL4 Li-Ion Battery	EH-6 AC Adapter	MH-21 Quick Charger
D2Xs	EN-EL4a Li-Ion Battery	EH-6 AC Adapter	MH-21 Quick Charger
D2H	EN-EL4 Li-Ion Battery	EH-6 AC Adapter	MH-21 Quick Charger
D2Hs	EN-EL4 Li-Ion Battery	EH-6 AC Adapter	MH-21 Quick Charger
D3	EN-EL4a Li-Ion Battery	EH-6 AC Adapter	MH-22 Quick Charger
D300	EN-EL3e Li-Ion Battery	EH-5a AC Adapter	MH-18a Quick Charger